

Work Order ID 72833

Tuesday, August 16, 2011 9:14:55 AM



Page 1

Item ID: K591-113

Accept



Setup Start



Revision ID:

Stop



Item Name: Short Step Instln Kit

Start Date: 8/16/2011 Start Qty: 10.00



Cust Item ID:

Required Date: 8/26/2011 Req'd Qty: 10.00



Customer:

Reference:

Approvals:

Process Plan:

Date: 8-16-11

Tooling:

Date:

Run Start



QC:

Date:

SPC (Y/N):

Date:

Stop

Sequence ID/
Work Center IDOperation
DescriptionSet Up/
Run Hours

Tool ID

Tool #

Plan
CodeAccept
QtyReject
QtyReject
NumberInsp.
Stamp

Draw Nbr

Revision Nbr

DSI9525

A

104

Pick Kit

0.00



Packaging

Memo

0.00

Packaging

8/16/11 (10)

105

QC- 100% Inspect kits for completeness

0.00



QC

Memo

0.00

Quality Control

8/16/11

(10)

110

Identify as per dwg & Stock Location:

0.00



Packaging

Memo

0.00

Packaging

CHG005

PK

8/16/11 (10)

Handwritten note: 11-8-30 (WHITE LABEL ORAL)

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Work Order ID 72833

Page 2

Tuesday, August 16, 2011 9:14:55 AM

Item ID: K591-113

Accept



Setup Start



Revision ID:

Stop



Item Name: Short Step Instln Kit

Start Date: 8/16/2011 Start Qty: 10.00



Cust Item ID:

Required Date: 8/26/2011 Req'd Qty: 10.00



Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start



QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop

Sequence ID/
Work Center IDOperation
DescriptionSet Up/
Run Hours

Tool ID

Tool #

Plan
CodeAccept
QtyReject
QtyReject
NumberInsp.
Stamp

120

QC21- Final Inspection - Work Order Release

0.00



QC

Memo

0.00

Quality Control

11/9/16

ME
11-09-15

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Picklist Print

Tuesday, August 16, 2011 9:15:01 AM

Page 1

Work Order ID: 72833

Parent Item: K591-113

Parent Item Name: Short Step Instln Kit

Start Date: 8/16/2011

Required Date: 8/26/2011

Start Qty: 10.00

Required Qty: 10.00

Comments: IPP : C 04.11.09 Reformat KJ/JLM
as per revG DD 10.04.20 verified by:EC
586 10.06.18 DD verf:EC

IPP Rev:D
IPP Rev:E as per ECN10-

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
---------------------------------	------------------------	---------------	-------------	---------------------	------------------	-----------------	--------------------	----------------	-------------	--------------	---------------	----------------	--------

D2171

Manufactured

No

104

Each

21.0000

2

20



Clamp

Location

Loc Qty

Loc Code

ST456

21

68938

21

D2274

Manufactured

No

104

Each

423.0000

4

40



Radius Block

Location

Loc Qty

Loc Code

ST010

423

68942

123

69736

200

69773

100

D2182B

Manufactured

No

104

f

181.5992

0.5833

5.833



Rubber Cushion

Location

Loc Qty

Loc Code

ST410

181.59917

66063

181.59917

(D2182B035) CUT 2 AT 3.50"

66063

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Picklist Print

Tuesday, August 16, 2011 9:15:01 AM

Work Order ID: 72833

Parent Item: K591-113

Parent Item Name: Short Step Instln Kit

Start Date: 8/16/2011

Required Date: 8/26/2011

Start Qty: 10.00

Required Qty: 10.00

D2362-3 Manufactured No

104 Each

11.0000

1 10



Support Bracket

Location

Loc Qty

Loc Code

ST

11

72507

11

104

Each

65.3336

1

10

D3595-200-300

Manufactured No



RUBBER CUSHION

Location

Loc Qty

Loc Code

ST416

65.3336

41360

65.3336

104

Each

197.0000

2

20

AN3-37A

Purchased

No



Bolt

Location

Loc Qty

Loc Code

ST353

147

105425

11

111668

136

ST354

50

117619

50

104

Each

7.0000

4

40

AN4-21A

Purchased

No



Bolt

Location

Loc Qty

Loc Code

ST359

7

117514

7

M/1/8706 35
M/1/7514 50

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Picklist Print

Tuesday, August 16, 2011 9:15:02 AM

Work Order ID: 72833

Parent Item: K591-113

Parent Item Name: Short Step Instln Kit

Start Date: 8/16/2011

Required Date: 8/26/2011

Start Qty: 10.00

Required Qty: 10.00

AN4-22A Purchased No

104 Each

139.0000

1

10



Bolt

Location

Loc Qty

Loc Code

ST359

139

116419

49

117313

90

104

Each

0.0000

4

40

AN960JD10

NAS1149D0363J

Purchased

No



Washer

AN960JD416

NAS1149D0463J

Purchased

No



Washer

MS21042L3

Purchased

No



Nut

Location

Loc Qty

Loc Code

ST300

1915

117441

270

117601

400

117885

245

118451

1000

104

Each

4,809.000

5

50

MS21042L4

Purchased

No



Nut

Location

Loc Qty

Loc Code

ST300

4809

117441

664

117601

645

117885

1500

118451

2000

Tuesday, August 16, 2011 9:15:02 AM

Shop Packet Print

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D350-591 REV. G
AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-591 REV. 3
REF TCCA STC: SH92-6
REF FAA STC: SH967NE

PURPOSE:

TO PROVIDE AN OPTIONAL CUSHION KIT TO BE INSTALLED ON THE D350-591-111A/-113/-115/-117A/-119 *Heli-Access-Step™* (THE D2856-400-720 ABRASION STRIP IS REPLACED WITH THE D3595-200-300 CUSHION).

CHANGE:

FOR D350-591-111A/-113/-115 @ CHG 005 (OR LATER), D350-591-117A @ CHG 003 (OR LATER) AND D350-591-119 @ CHG 004 (OR LATER), THE PARTS LIST OF INSTALLATION INSTRUCTIONS D350-591 AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-591 IS AMENDED AS FOLLOWS:

QTY -111A	QTY -113	QTY -115	QTY -117A	QTY -119	Part Number	Description
X					D350-591-111A	Heli-Access-Step™, Long Step – High Skid
	X				D350-591-113	Heli-Access-Step™, Short Step – High Skid
		X			D350-591-115	Heli-Access-Step™, Short Step – Low Skid
			X		D350-591-117A	Heli-Access-Step™, Pre-Flight Step
				X	D350-591-119	Heli-Access-Step™, Long Step – Low Skid
	1				D2310	STEP ASSEMBLY (HIGH-SHORT)
1					D2311	STEP ASSEMBLY (HIGH-LONG)
		1			D2354	STEP ASSEMBLY (LOW-SHORT)
				1	D2355	STEP ASSEMBLY (LOW-LONG)
4	2	2	2	2	D2171	CLAMP
4	2	2	2	2	D2182B035	CUSHION
8	4	4	4	4	D2274	RADIUS BLOCK
			1		D2362-041	SUPPORT BRACKET
2	1			1	D2362-3	SUPPORT BRACKET
		1			D2362-5	SUPPORT BRACKET
2	1	1	1	1	D3595-200-300	CUSHION (NEW)
2	2	2		2	AN3-37A	BOLT
		4			AN4-20A	BOLT (REPLACED, WAS AN4-16A)
8	4			4	AN4-21A	BOLT (REPLACED, WAS AN4-20A)
1	1	1	4	1	AN4-22A	BOLT
4	4	4		4	NAS1149D0363J	WASHER (OR AN960JD10)
10	6	2	4	6	NAS1149D0463J	WASHER (OR AN960JD416)
		4			NAS1149D0416J	WASHER (OR AN960JD416L)
2	2	2		2	MS21042L3	NUT
9	5	5	4	5	MS21042L4	NUT

SHOP COPY

RETURN TO

ENGINEERING


UNCONTROLLED COPY





SUBJECT TO AMENDMENT

WITHOUT NOTICE

WORK ORDER

NO. 72833

CANADA DEPARTMENT OF TRANSPORT AIRCRAFT CERTIFICATION BRANCH DAO # 01-O-01
APPROVED  BY: <u>D. SHEPHERD (DE # 02)</u>
DATE: <u>10.06.08</u>
CERT. NO.: <u>SH92-6</u>
ISSUE NO.: <u>11</u>

A	NEW ISSUE.	JPH	10.06.08
REV.	DESCRIPTION	BY	DATE
DESIGN		DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN			
CHECKED		DRAWING NO. REV. A	
MFG. APPR.	N/A	DSI 9525 SHEET 1 OF 4	
APPROVED		TITLE SCALE	
DE APPR.		STEP CUSHION CHANGE NTS	
DATE	10.06.08	<small>COPYRIGHT © 2010 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>	

THE DSI-9525-XXX KITS THAT ARE AVAILABLE FROM DART TO UPGRADE THE D350-591-111A/-113/-115 KITS @ CHG 004 (OR EARLIER), THE D350-591-117A KIT @ CHG 002 (OR EARLIER) AND THE D350-591-119 KIT @ CHG 003 (OR EARLIER) ARE AS FOLLOWS:

QTY -011	QTY -013	QTY -015	QTY -017	Part Number	Description
X				DSI-9525-011	STEP CUSHION KIT (FOR D350-591-111A)
	X			DSI-9525-013	STEP CUSHION KIT (FOR D350-591-113/-119)
		X		DSI-9525-015	STEP CUSHION KIT (FOR D350-591-115)
			X	DSI-9525-017	STEP CUSHION KIT (FOR D350-591-117A)
2	1	1	1	D3595-200-300	CUSHION
		4		AN4-20A	BOLT
8	4			AN4-21A	BOLT
			4	AN4-22A	BOLT
8	4	4	4	NAS1149D0463J	WASHER (OR AN960JD416)
8	4	4	4	MS21042L4	NUT

INSTRUCTIONS:

TO INSTALL THE D3595-200-300 CUSHION:

1. REMOVE THE STEP PER ICA-D350-591 SECTION 32.2
2. REMOVE THE D2856-400-720 ABRASION STRIP PER ICA-D350-591 SECTION 32.4
3. POSITION THE D3595-200-300 CUSHION AS INDICATED ON SHEET 3 OR 4 (AS APPLICABLE) OF THIS SERVICE INSTRUCTION.
4. REINSTALL THE STEP PER ICA-D350-591 SECTION 32.1 AS APPLICABLE USING THE NEW HARDWARE PROVIDED AS SHOWN ON SHEET 3 OR 4 (AS APPLICABLE) OF THIS SERVICE INSTRUCTION.

WEIGHT AND BALANCE:

THERE IS A NEGLIGIBLE WEIGHT INCREASE WITH THIS MODIFICATION.

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 72833

11-08-16


CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED


BY: [Signature]
D. SHEPHERD (DE # 02)

DATE: 10.06.08
CERT. NO.: SH92-6
ISSUE NO.: 11


DESIGN	<u>9</u>	DART AEROSPACE LTD	
DRAWN	<u>[Signature]</u>	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<u>[Signature]</u>	DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9525	SHEET 2 OF 4
APPROVED	<u>[Signature]</u>	TITLE	SCALE
DE APPR.	<u>[Signature]</u>	STEP CUSHION CHANGE	NTS
DATE	10.06.08	<small>COPYRIGHT © 2010 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>	

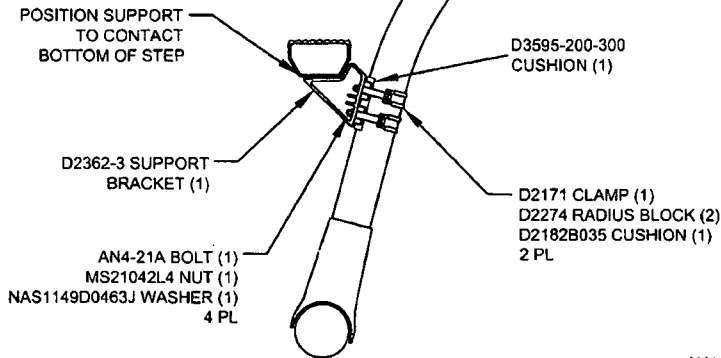

SECTION C-C: CENTER SUPPORT
(D350-591-111A ONLY)
(NOT TO SCALE)

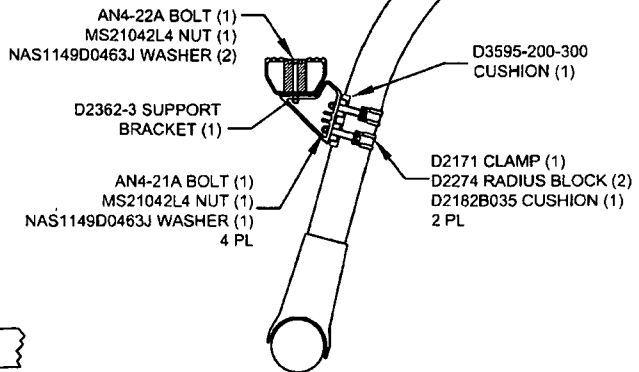

SECTION D-D: AFT ATTACHMENT
(D350-591-111A/-113/-119 ONLY)
(NOT TO SCALE)

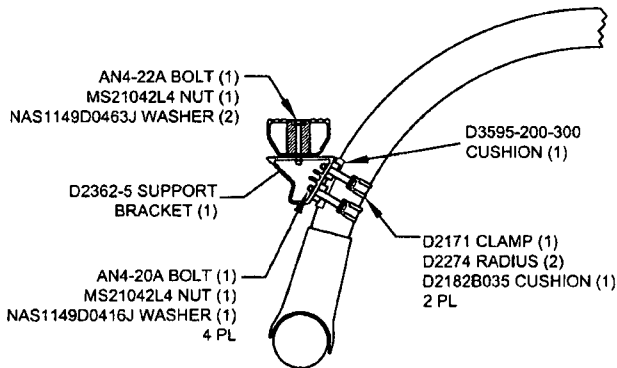

SECTION E-E: AFT ATTACHMENT
(D350-591-115 ONLY)
(NOT TO SCALE)

78833

FIGURE 32-9: Crosstube Attachment
REF ICA-D350-591

FIGURE 9: Crosstube Attachment
REF D350-591

CANADA DEPARTMENT OF TRANSPORT AIRCRAFT CERTIFICATION BRANCH DAO # 01-O-01	
APPROVED	
BY: <i>[Signature]</i>	D. SHEPHERD (DE # 02)
DATE: 10.06.08	
CERT. NO.: SH92-6	
ISSUE NO.: 11	

DESIGN	<i>90</i>	DART AEROSPACE LTD	
DRAWN	<i>8</i>	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>8</i>	DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9525	SHEET 3 OF 4
APPROVED	<i>140</i>	TITLE	SCALE
DE APPR.	<i>140</i>	STEP CUSHION CHANGE	NTS
DATE	10.06.08	<small>COPYRIGHT © 2010 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>	

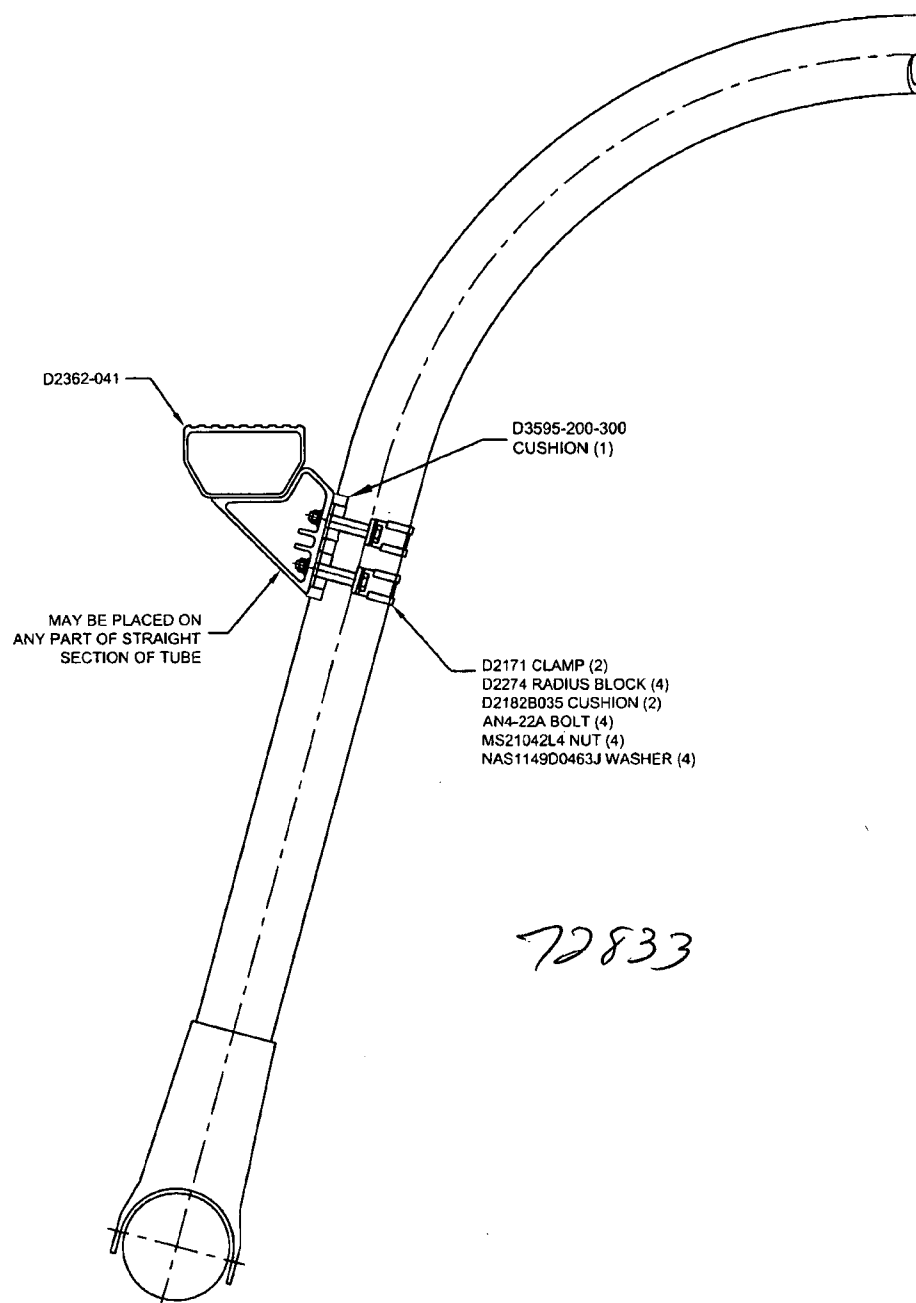


FIGURE 32-10: D350-591-117A Heli-Access-Step™, Pre-Flight Step
REF ICA-D350-591

FIGURE 10: D350-591-117A Heli-Access-Step™, Pre-Flight Step
REF D350-591

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 10.06.08
CERT. NO.: SH92-6
ISSUE NO.: 11

DESIGN	<i>[Signature]</i>	DART AEROSPACE LTD	
DRAWN	<i>[Signature]</i>	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9525	SHEET 4 OF 4
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	STEP CUSHION CHANGE	NTS
DATE	10.06.08	COPYRIGHT © 2010 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D350-591 REV. 3
AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-591 REV. 3
REF TCCA STC: SH92-6
REF FAA STC: SH967NE

PURPOSE:

TO PROVIDE AN OPTIONAL CUSHION KIT TO BE INSTALLED ON THE D350-591-111A/-113/-115/-117A/-119 *Heli-Access-Step™* (THE D2856-400-720 ABRASION STRIP IS REPLACED WITH THE D3595-200-300 CUSHION).

CHANGE:




FOR D350-591-111A/-113/-115 @ CHG 005 (OR LATER), D350-591-117A @ CHG 003 (OR LATER) AND D350-591-119 @ CHG 004 (OR LATER), THE PARTS LIST OF INSTALLATION INSTRUCTIONS D350-591 AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-591 IS AMENDED AS FOLLOWS:

QTY -111A	QTY -113	QTY -115	QTY -117A	QTY -119	Part Number	Description
X					D350-591-111A	Heli-Access-Step™, Long Step – High Skid
	X				D350-591-113	Heli-Access-Step™, Short Step – High Skid
		X			D350-591-115	Heli-Access-Step™, Short Step – Low Skid
			X		D350-591-117A	Heli-Access-Step™, Pre-Flight Step
				X	D350-591-119	Heli-Access-Step™, Long Step – Low Skid
	1				D2310	STEP ASSEMBLY (HIGH-SHORT)
1					D2311	STEP ASSEMBLY (HIGH-LONG)
		1			D2354	STEP ASSEMBLY (LOW-SHORT)
				1	D2355	STEP ASSEMBLY (LOW-LONG)
4	2	2	2	2	D2171	CLAMP
4	2	2	2	2	D2182B035	CUSHION
8	4	4	4	4	D2274	RADIUS BLOCK
			1		D2362-041	SUPPORT BRACKET
2	1			1	D2362-3	SUPPORT BRACKET
		1			D2362-5	SUPPORT BRACKET
2	1	1	1	1	D3595-200-300	CUSHION (NEW)
2	2	2		2	AN3-37A	BOLT
		4			AN4-20A	BOLT (REPLACED, WAS AN4-16A)
8	4			4	AN4-21A	BOLT (REPLACED, WAS AN4-20A)
1	1	1	4	1	AN4-22A	BOLT
4	4	4		4	NAS1149D0363J	WASHER (OR AN960JD10)
10	6	2	4	6	NAS1149D0463J	WASHER (OR AN960JD416)
		4			NAS1149D0416J	WASHER (OR AN960JD416L)
2	2	2		2	MS21042L3	NUT
9	5	5	4	5	MS21042L4	NUT

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED
BY: 
D. SHEPHERD (DE # 02)

DATE: 10.06.08
CERT. NO.: SH92-6
ISSUE NO.: 11

A	NEW ISSUE.	JPH	10.06.08
REV.	DESCRIPTION	BY	DATE
DESIGN		DART AEROSPACE LTD	
DRAWN		HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9525	SHEET 1 OF 4
APPROVED		TITLE	SCALE
DE APPR.		STEP CUSHION CHANGE	NTS
DATE	10.06.08	<small>COPYRIGHT © 2010 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>	

REFERENCE ONLY

THE DSI-9525-XXX KITS THAT ARE AVAILABLE FROM DART TO UPGRADE THE D350-591-111A/-113/-115 KITS @ CHG 004 (OR EARLIER), THE D350-591-117A KIT @ CHG 002 (OR EARLIER) AND THE D350-591-119 KIT @ CHG 003 (OR EARLIER) ARE AS FOLLOWS:

QTY -011	QTY -013	QTY -015	QTY -017	Part Number	Description
X				DSI-9525-011	STEP CUSHION KIT (FOR D350-591-111A)
	X			DSI-9525-013	STEP CUSHION KIT (FOR D350-591-113/-119)
		X		DSI-9525-015	STEP CUSHION KIT (FOR D350-591-115)
			X	DSI-9525-017	STEP CUSHION KIT (FOR D350-591-117A)
2	1	1	1	D3595-200-300	CUSHION
		4		AN4-20A	BOLT
8	4			AN4-21A	BOLT
			4	AN4-22A	BOLT
8	4	4	4	NAS1149D0463J	WASHER (OR AN960JD416)
8	4	4	4	MS21042L4	NUT

INSTRUCTIONS:

TO INSTALL THE D3595-200-300 CUSHION:

1. REMOVE THE STEP PER ICA-D350-591 SECTION 32.2
2. REMOVE THE D2856-400-720 ABRASION STRIP PER ICA-D350-591 SECTION 32.4
3. POSITION THE D3595-200-300 CUSHION AS INDICATED ON SHEET 3 OR 4 (AS APPLICABLE) OF THIS SERVICE INSTRUCTION.
4. REINSTALL THE STEP PER ICA-D350-591 SECTION 32.1 AS APPLICABLE USING THE NEW HARDWARE PROVIDED AS SHOWN ON SHEET 3 OR 4 (AS APPLICABLE) OF THIS SERVICE INSTRUCTION.

WEIGHT AND BALANCE:






THERE IS A NEGLIGIBLE WEIGHT INCREASE WITH THIS MODIFICATION.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 10.06.08
CERT. NO.: SH92-6
ISSUE NO.: 11

DESIGN		DART AEROSPACE LTD	
DRAWN		HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9525	SHEET 2 OF 4
APPROVED		TITLE	SCALE
DE APPR.		STEP CUSHION CHANGE	NTS
DATE	10.06.08	<small>COPYRIGHT © 2010 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>	